


### **CONNECTING YOUR DEVICES TO A SHURE MIXER**


The variety of connectors on audio equipment sometimes leads to confusion in wiring. The diagrams below provide wiring recommendations for most common cables.


NOTE: XLR pin 1 is always connected to cable shield.


#### **BALANCED CABLE**

#### **UNBALANCED CABLE**

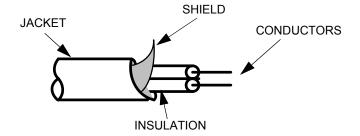


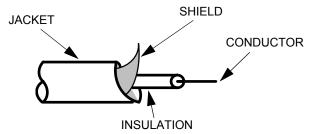


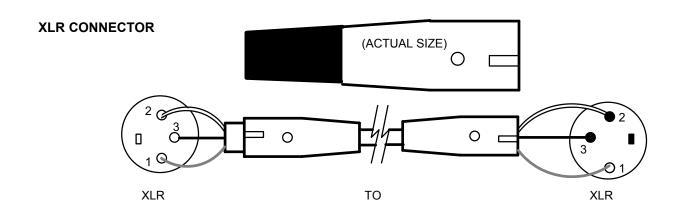


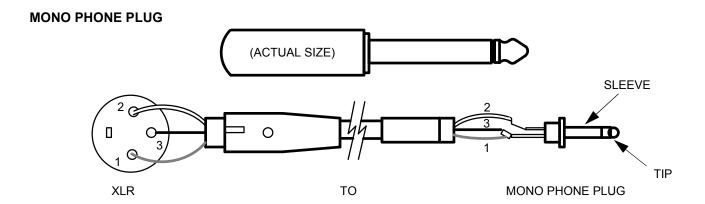

# STEREO PHONE PLUG (USED AS A BALANCED LINE CONNECTION)

 

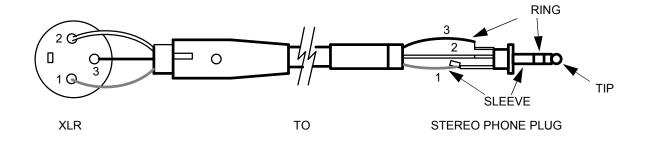

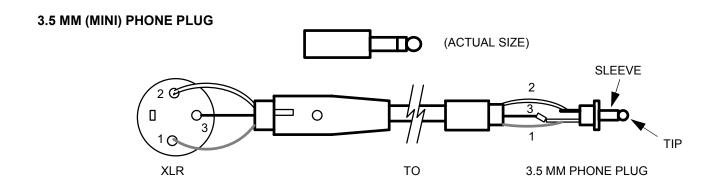

## **PHONO PIN (RCA) PLUG**

